Quick Start Guide

1200-RR00-00-0-x Programmable PID Controller



GETTING STARTED

- Unpack Contents
- Verify model numberand application
- Power Controller
- Program for vourapplication

Note

Change all menu parameters by using the front panel buttons





What's Included






- 48x96 DIN 1200-BB00-00-0-x Gefran Controller
- Mounting Bracket
- Panel Sealing Gasket
- Screw Terminal Cover
- Multi-Language Manual

Program Your Gefran Controller

- Press and hold (a) until PRS appears ENTER 99
- Press 6 once, Pro appears ENTER 128
- Press F once, PRS appears ENTER 99
- Press and hold (antil Hrd appears)
- Press (twice, [Lr appears ENTER 14
- Press once. FL.n appears ENTER 0
- Press and hold (F) until [F] appears
- Press and hold (F) until [....] appears
 - ENTER $\mathcal Q$ cooling with Air
 - ENTER / cooling with Oil
 - ENTER \mathcal{Q} cooling with Water
- Press and hold (until InPappears
- Press **(F)** twice, £90 appears ENTER the Input Sensor number
- Press Prepeatedly until La.5* appears ENTER the minimum Input Scale limit
- Press once, H:.5* appears ENTER the maximum Input Scale limit
- Press F repeatedly until La.L* appears ENTER the minimum Alarm Scale limit
- Press once, H.L* appears ENTER the maximum Alarm Scale limit
- Press and hold (until But appears
- Press (once, rt. lappears ENTER !
- Press and hold (f) until you return to the main process display. This is the display after PAS and will be indicated by the Process Variable if an input sensor is connected, or La, Hi, 5br, *Err* if no input is connected.
- Use the
 \(\triangle \) and
 \(\triangle \) buttons to adjust the control setpoint (SV) from the main display.
- Press the button to switch between automatic and manual control modes from the main display. LED 1(11) will light while in manual mode.
- * Parameter may be left at default value for input types 0...37

3 Connect Your Controller

configurations are available in the User's Manual and **General Setup** Guide

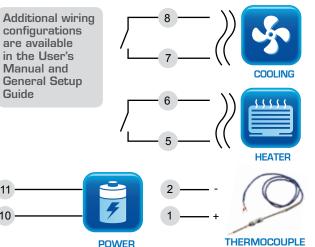

If needed, automatic tuning (Self-Tune) can be enabled with the following steps

With the machine at ambient temperature and the control setpoint (SV) set...

- Press and hold (F) until [F] appears
- Press 🕒 once, 5. Tu appears ENTER 2
- Press 🙃 once
- Cycle power to the controller
- LED 3 [L3] will flash during the tuning process

Self-Tune will automatically save new PID values once complete

This Quick Start Guide provides basic information on setting up the Gefran 1200 controller for the application referenced above. Additional software and hardware configuration information can be found in the User's Manual included with this controller or online at www.gefran.com



Input Sensor

O TCJ°C

1 TCJ°F

2 TCK°C

3 TCK°F

4 TCR°C

5 TCR°F

6 TCS°C 7 TCS°F

8 TCT°C

9 TCT°F

Sensor Type

30 PT100 °C

31 PT100 °F

32 JPT100 °C

33 JPT100 °F

34 PTC °C

35 PTC °F

36 NTC °C

37 NTC °F

44 4...20 mA

46 O...10 V