

Quick Start Guide

1200-RDRO-00-0-x Programmable PID Controller



Heat - Cool - Alarm

GETTING STARTED

- Unpack Contents
- Verify model number and application
- Power Controller
- Program for your application

Note

Change all menu parameters by using the front panel buttons



1 What's Included



- 48x96 DIN 1200-RDRO-00-0-x Gefran Controller x2
- Mounting Bracket
- Panel Sealing Gasket
- Screw Terminal Cover
- Multi-Language Manual




2 Program Your Gefran Controller

- Press and hold **F** until *PRG* appears — ENTER *99*
- Press **F** once, *Pro* appears — ENTER *128*
- Press **F** once, *PRG* appears — ENTER *99*
- Press and hold **F** until *Hrd* appears
- Press **F** twice, *Clr* appears — ENTER *14*
- Press **F** twice, *but* appears — ENTER *1*
- Press and hold **F** until *CFG* appears
- Press and hold **F** until *C.Me* appears
 - ENTER *0* cooling with Air
 - ENTER *1* cooling with Oil
 - ENTER *0* cooling with Water
- Press and hold **F** until *inp* appears
- Press **F** twice, *LYP* appears — ENTER the Input Sensor number from the list
- Press **F** repeatedly until *Lo.S** appears — ENTER the minimum Input Scale limit
- Press **F** once, *Hi.S** appears — ENTER the maximum Input Scale limit
- Press **F** repeatedly until *Lo.L** appears — ENTER the minimum Alarm Scale limit
- Press **F** once, *Hi.L** appears — ENTER the maximum Alarm Scale limit
- Press and hold **F** until *Out* appears
- Press **F** three times, *rl. 1* appears — ENTER *1*
- Press **F** twice, *rl. 3* appears — ENTER *2*
- Press and hold **F** until you return to the main process display. This is the display after *PRG* and will be indicated by the Process Variable if an input sensor is connected, or *Lo*, *Hi*, *Sbr*, *Err* if no input is connected.
- Use the **▲** and **▼** buttons to adjust the control setpoint (SV) from the main display.
- Press **F** once from the main display, *AL. 1* appears to adjust the Alarm 1 setpoint.
- Press the **⏻** button to switch between automatic and manual control modes from the main display. LED 1 (**L1**) will light while in manual mode.

| Input Sensor | | | |
|--------------|----|-------------|--|
| Sensor Type | | Sensor Type | |
| 0 TC J °C | 30 | PT100 °C | |
| 1 TC J °F | 31 | PT100 °F | |
| 2 TC K °C | 32 | JPT100 °C | |
| 3 TC K °F | 33 | JPT100 °F | |
| 4 TC R °C | 34 | PTC °C | |
| 5 TC R °F | 35 | PTC °F | |
| 6 TC S °C | 36 | NTC °C | |
| 7 TC S °F | 37 | NTC °F | |
| 8 TC T °C | 44 | 4...20 mA | |
| 9 TC T °F | 46 | 0...10 V | |

3 Connect Your Controller

Additional wiring configurations are available in the User's Manual and General Setup Guide

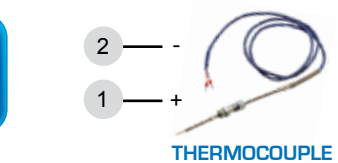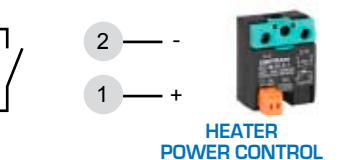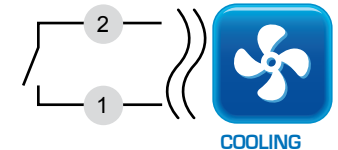

If needed, automatic tuning (Self-Tune) can be enabled with the following steps

With the machine at ambient temperature and the control setpoint (SV) set...

- Press and hold **F** until *CFG* appears
- Press **F** once, *Stu* appears — ENTER *2*
- Press **F** once
- Cycle power to the controller
- LED 3 (**L3**) will flash during the tuning process

Self-Tune will automatically save new PID values once complete

This Quick Start Guide provides basic information on setting up the Gefran 1200 controller for the application referenced above. Additional software and hardware configuration information can be found in the User's Manual included with this controller or online at www.gefran.com

* Parameter may be left at default value for input types 0...37